


Vintage Air Part # 15834-VCB



ALTERNATOR MOUNT 214L

Small Block Chevy - Long Water Pump
Driver's Side - Low

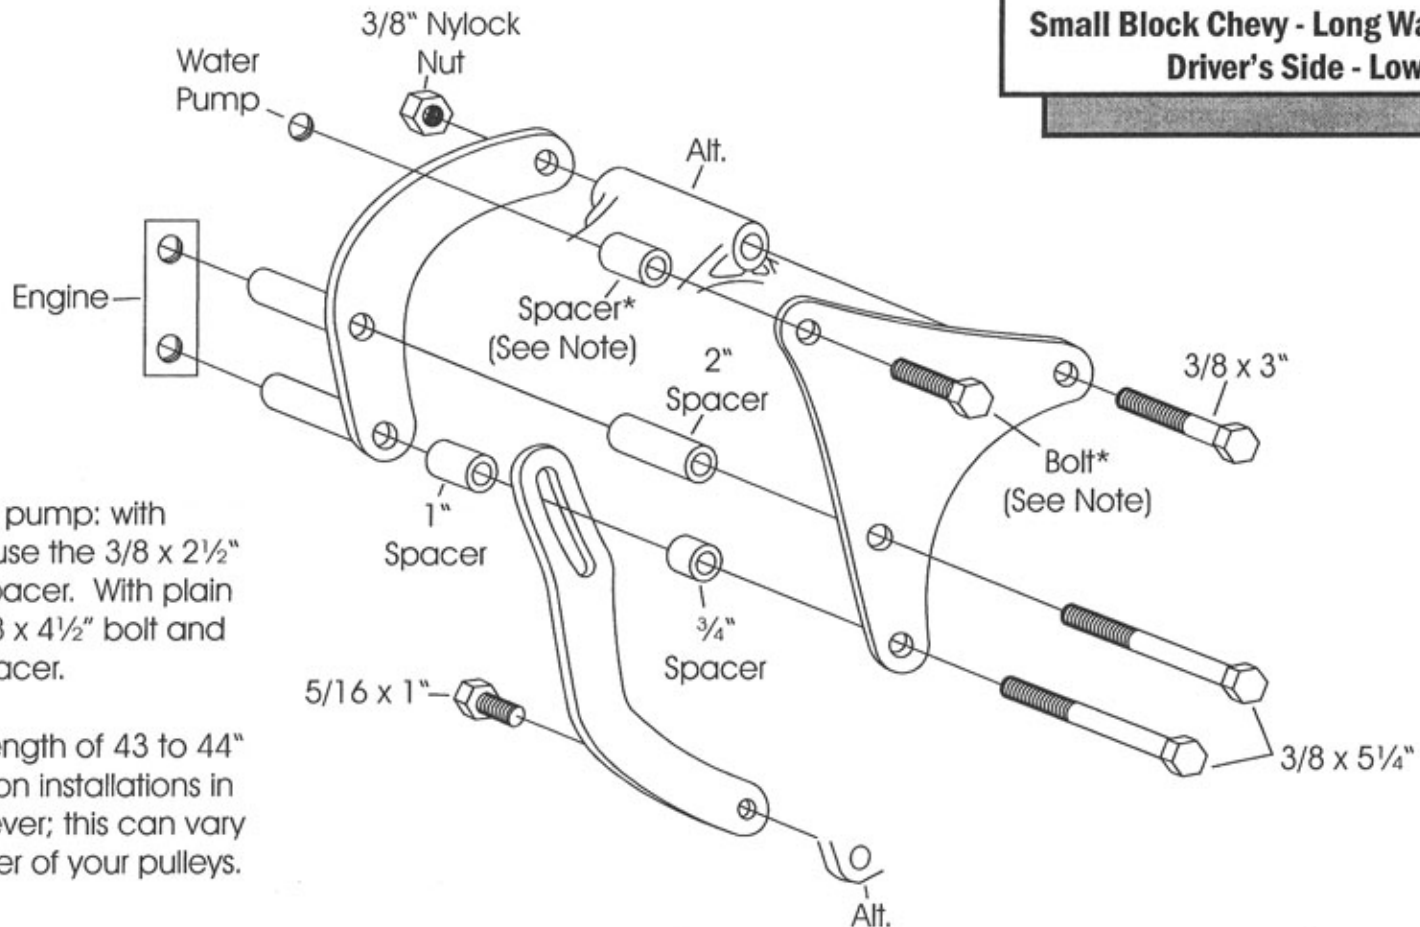

*NOTE: At water pump: with threaded boss use the 3/8 x 2 1/2" bolt and 1 3/4" spacer. With plain boss use the 3/8 x 4 1/2" bolt and nut and 1 1/2" spacer.

We use a belt length of 43 to 44" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.