




www.vintageair.com

Packing List: 1967-72 Ford F-100 Reduced Barrier Modified Hose Kit (511174)

No.	Qty.	Part No.	Description
1.	1	087087	Hose, #6 A/C, Drier/Evaporator, Reduced Barrier
2.	1	087090	Hose, #10 A/C, Compressor/Bulkhead, Reduced Barrier, Modified
3.	1	087089	Hose, #10 A/C, Bulkhead/Evaporator, Reduced Barrier
4.	1	087092	Hose, #8 A/C, Condenser/Compressor, Reduced Barrier, Modified
5.	1	355430	Fitting, #10, 135° with Service Port
6.	1	355320	Fitting, #8, 90° with Service Port
7.	4	21300-VUP	Tie Wrap, 11"
8.	1	31601-VUD	Adel Clamp, 1" I.D.
9.	1	18250-VUB	Screw, 10-32 x 1/2", Pan Head
10.	1	18251-VUB	Nut with Star Washer, 10-32
11.	2	33857-VUF	O-ring, #6
12.	2	33858-VUF	O-ring, #8
13.	4	33859-VUF	O-ring, #10
14.	1	41117-VUP	Refrigerant Oil
15.	1	900002	Instruction, Modified Hose Kit

Checked By: _____
Packed By: _____
Date: _____

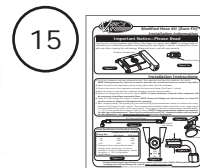

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**